

For floodplain management purposes, the lowest floor is designated as the area of a building which must be located at or above the base flood or 100- year flood elevation.

The lowest floor reference level in the A- Zone is the top of the lowest floor, while in the V-Zone, the lowest floor reference level is the bottom of the lowest horizontal structurally supporting member.

All Lowest Floor Elevations (Base Flood Elevations) are measured using NGVD (National Geodetic Vertical Datum) which relates to Mean Sea Level.

Information contained on this map is deemed reliable but not guaranteed. See the official Flood Insurance Rate Map (FIRM) for panel information.

The official FIRM as published by FEMA is available for review at  
Marco Building Services Department  
Marco Island City Hall  
50 Bald Eagle Drive  
Marco Island, Florida

# LOWEST FLOOR ELEVATIONS

(Effective November 17, 2005)  
CITY OF MARCO ISLAND

### Legend

- FLOOD ELEVATIONS
- CITY LIMITS
- COASTAL CONTROL LINE
- EXTENT OF COASTAL CONTROL ZONE
- PROPERTY LINES
- STREET ROW
- CITY MANDATED AE-10.0 LOWEST FLOOR ELEVATIONS
- LAND OUTSIDE CITY LIMITS
- B** WIND EXPOSURE "B"
- C** WIND EXPOSURE "C"

SCALE

1:9,800

0 0.3 0.6 1.2 Miles


### DISCLAIMER

Both the City of Marco Island and the Office of the Collier County Property Appraiser disclaim any liability for the information provided herein and do not warrant the accuracy or completeness of this information. All information shown is for reference only.

Source of Parcels: Collier County Property Appraiser, Aug. 2009



SOURCE: CITY OF MARCO ISLAND GIS  
CREATED: 02/12/2009  
REVISED: 09/10/2009  
FILE: M:\gis\projects\FEMA-2003-07-05\FEMA2005-11-17\FEMA-Map-2005-11-17\FreeBoardLarge.mxd

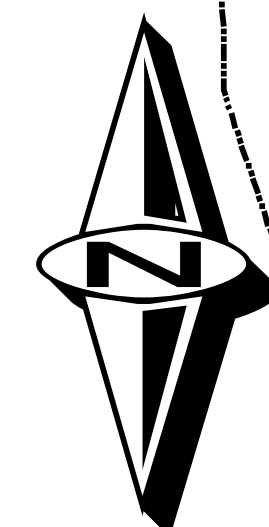

Gulf of Mexico

City Mandated  
AE-10.0

City Mandated  
AE-10.0

City Mandated  
AE-10.0

**C** **B**